

1. TEMPORARILY  
SUPPORT WALL ABOVE  
WINDOW

4. NEW PC CONC  
LINTEL

SEALANT JOINT  
W/BACKER ROD  
AT PERIMETER

TREATED WOOD  
BLOCKING SPACER

5. ONCE LINTEL HAS  
BEEN REMOVED, ALLOW  
MASONRY TO LOWER  
INTO ITS ORIGINAL  
POSITION

3. COMPLETELY REMOVE  
EXISTING LINTEL

SUB FRAME

6. NEW ALUM  
PROJECTED STYLE  
WINDOW

HEAD

SEALANT @ PERIMETER

JAMB


1 1/2"

2. REMOVE EX. WINDOW

SALVAGED SILL

SILL

NOTE NUMBER INDICATES  
SEQUENCE OF WORK

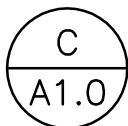

# WINDOW REPLACEMENT

1 1/2" = 1'-0"